Cyberbike™ 2

CYCLING SPORTS

READ THIS FIRST

PS3™ Cyberbike™ Quick start Guide

1. Assemble the Cyberbike™ as instructed in Section 2a of the instruction book.
   Ensure that you connect the cables inside the handlebar and seat posts.
   Please use a Phillips screwdriver to make sure the screw for the left handle is fully screwed in before use.

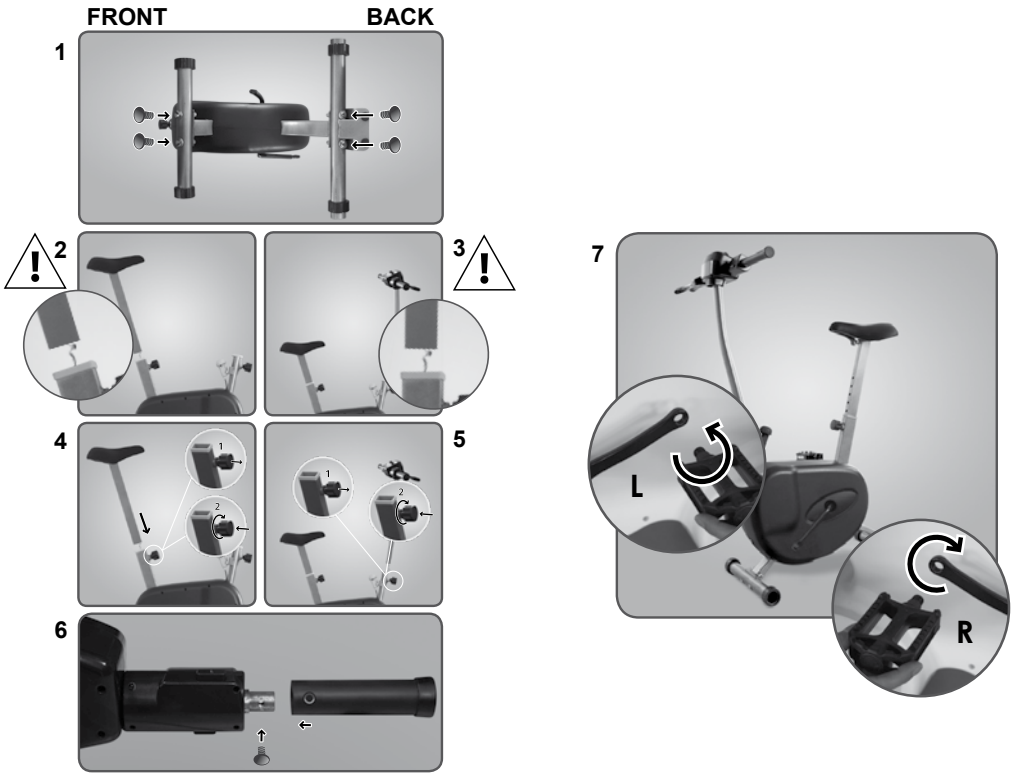

2. Adjust the seat to your preferred height. The ideal position is to have your knees slightly bent at the lowest position of the pedals. Do not attempt to adjust the height whilst sat on the seat.

3. Adjust the height of the handlebar to your preferred height.
   Ensure that your handlebars are centred before powering up.

4. Attach the USB cable to the Cyberbike™ and the PS3™ console.

5. Press the home button to sync the Cyberbike™ to the console Check that your handlebars are centred correctly and turn on your console.

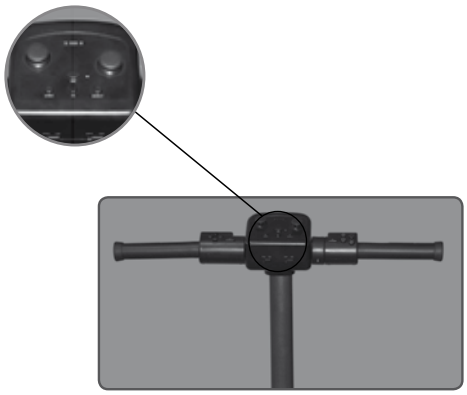

If you experience any problems with your Cyberbike™ please follow the following points and refer to the main instruction book.

Read the Section 6 of your manual `Warning' before using the product.

Troubleshooting

The vehicle/character fails to move on the screen when you are pedalling on the Cyberbike™.

- Check that all cables are properly connected inside the Cyberbike™. See section 2a.
- Check that the PS3™ / Cyberbike™ mode switch is in the desired mode. See section 4c.
- Ensure the Cyberbike™ is configured as controller 1. If not press the home button, whilst in the game and assign it to controller 1.

The vehicle/character fails to respond when you apply the Cyberbike™ brake.

- Check that all cables are properly connected inside the Cyberbike™. See section 2a.
- Check that the PS3™ / Cyberbike™ mode switch is in the desired mode. See section 4c.

The seat button does not function.

- Check that all cables are properly connected inside the Cyberbike™. See section 2a.
- Ensure that the bike is not being sat on when it is first powered on.
- Note that this function only works in certain sections of the game. Please take note in the games instructions for the correct usage.

The vehicle/character turns, although the handlebars are centred.

- Cancel all programming. See section 4aiii.
- Restore manufacturer's calibration. See section 4b.

The game fails to respond to your Cyberbike™ signals.

- Ensure your Cyberbike™ has power. Connect the USB cable and press the home button to switch on. See section 2 – USB connection.
- Cancel all programming. See section 4aiii.
- Restore manufacturer's calibration. See section 4b.
- Ensure the Cyberbike™ is configured as controller 1. If not press the home button, whilst in the game and assign it to controller 1.

Your Cyberbike™ will not connect to the console.

- Ensure your Cyberbike™ has power. Connect the USB cable and press the home button to switch on. See section 2 – USB connection.

www.bigben.eu